

01/W Series	Initialization: Hold Reset and Compare while turning it on.	Preload: Global screen 7 Press G then E	ROM Check: Hold Reset while turning it on.
03R/W	Initialization: Hold Edit and 1 while turning it on.	Preload: Global screen 5D, then select "OK".	ROM Check: Hold +1 and -1 while turning it on.
05R/W	Initialization: Hold Edit and 1 while turning it on.	Preload: Global Screen 5A, then select "OK".	ROM Check: Hold Edit and Global/Multi while turning it on.
168RC	Initialization: Hold leftmost Knob under screen and Up and Down while turning it on.	Preload: Factory data must be transmitted and returned via SysEx dump.	ROM Check: Given on power up.
A1	Initialization: Hold Write and -1 while turning it on.	Preload: Card Load (SPC0A1)	ROM Check: Hold Write while turning it on.
A2/A3	Initialization: Hold Chain/Effect and B while turning it on.	Preload: Hold Up and Down arrows while turning it on. Press	ROM Check: Hold Utility, Up and A while turning the unit on. Press F. Set M/R to M/S and D/R to D/S. Hold Utility and F.
A4	Initialization: Battery Removal	Preload: Hold Bank Up and Write while turning it on. PL appears. press write again.	ROM Check: N/A
A5	Initialization: Battery Removal	Preload: Hold Mode Footswitch and Write while turning it on. Press Footswitch 1, F is displayed on screen.	ROM Check: N/A
AX1000G	Initialization: Battery Removal	Preload: Hold Bank footswitch and Exit button while turning it on. Press Write button to load the factory programs.	ROM Check: N/A
AX100G	Initialization: Battery Removal	Preload: Hold FX Select EXIT button while turning it on. Press write button.	ROM Check: N/A
AX1500G	Initialization: Battery Removal	Preload: 1. Hold down Bank footswitch EXIT button while turning it on. Then press Write button.	ROM Check: N/A
AX1G/B	Initialization: Battery Removal	Preload: Hold down the left arrow key and the "+" while powering on. Then press the "+" button again.	ROM Check: N/A
AX300G/B	Initialization: Battery Removal	Preload: Hold Param/Value and Compare/Write while turning it on. Then Compare/Write once again.	ROM Check: N/A
C-Series	Initialization: Hold MIDI/Transpose and Split buttons while turning it on.	Preload: Disk Load C900 (CFD01P) Ci86/9600 (CID00PE)	ROM Check: N/A
CX-3	Initialization: Hold Program 2 and 7 while turning it on.	Preload: Hold Program 2 and 7 while turning it on.	ROM Check: N/A
D Series	Initialization: System, Disk Utility, Initialize Execute	Preload: Backup CDs	ROM Check: Given on power up.
G3	Initialization: Battery Removal	Preload: Hold Bank and Write while turning it on. Release both and then press Write again.	ROM Check: N/A
i1/i2/i3	Initialization: Hold Edit/Style and Arrange/Play while turning it on.	Preload: Disk Load (IFD01P for i3 and i2, IFD02P for i1)	ROM Check: Hold Enter and 7 while turning it on.
I30	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (I30FD00P)	ROM Check: Given on power up.
i5S/M	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (IFD00P)	ROM Check: Hold Global while turning it on.
iS35/40/50/B i40M	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (IFDD1006 except for iS40 and i40M which is FDD1007)	ROM Check: Hold Disk/Global while turning it on.
iX300	Initialization: Hold Arr.Play and Global while turning it on.	Preload: Disk Load (IXD00P)	ROM Check: Hold Disk/Global while turning it on.
KAOSS Pad	Initialization: Hold 3, FX and HOLD buttons while turning it on. L appears in screen. Then press 1.3.5.1.3.5.	Preload: N/A	ROM Check: N/A
KARMA	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (KMFDD00P)	ROM Check: Given on power up.

M1	Initialization: Hold Int, Card and Combi while turning it on.	Preload: Card Load (MPC00P)	ROM Check: Hold INT while turning it on.
M1R/M1REX	Initialization: Hold Int, Combi and Prog while turning it on.	Preload: Card Load (MPC00P, MPC0EX for EX model)	ROM Check: Hold INT while turning it on.
M3R	Initialization: Hold Edit and No while turning it on.	Preload: Global screen 5D "OK", then select "O.K."	ROM Check: Hold Edit and Global while turning it on.
MS2000/2000R	Initialization: Hold Mod Sequencer On/Off and 3 while turning it on.	Preload: Global screen 2D, then select "OK".	ROM Check: Hold Mod Sequencer On/Off and 5 while turning it on.
N1/N5/EX	Initialization: Test Mode - Hold Enter and 7 while turning it on, then Page> to skip to "Ready to Boot", press Enter.	Preload: Press Utility, select "Factory Reset" then press Enter.	ROM Check: Hold 10s hold and Enter while turning it on.
N1R	Initialization: Test Mode - Hold Global and Dec- while turning it on, Page> skips to "Ready to Boot", press Enter.	Preload: Press Global, Page > to Init. Select "Factory Preload" then press Enter.	ROM Check: Hold Edit/Enter and Global while turning it on.
N364/N264	Initialization: Hold Enter and 7 while turning it on.	Preload: Disk Load (NSD3)	ROM Check: Hold Enter and 7 while turning it on.
NX/NS5R	Initialization: Hold Param. > and < while turning it on.	Preload: Enter button, then select Utility, Preset, Factory Preset, Yes.	ROM Check: Hold Param < and> while turning it on.
PA80/60	Initialization: N/A	Preload: Disk Load (6 Disk set available from korgpa.com)	ROM Check: Given on power up.
Prophecy	Initialization: Battery Removal	Preload: Global screen 19, press Enter.	ROM Check: Hold Enter and Exit while turning it on.
PX1	Initialization: Battery Removal	Preload: Metronome and Enter buttons while powering on. Then press the "+" button.	ROM Check: N/A
PX2	Initialization: Battery Removal	Preload: Rhythm and Enter buttons while powering on. Then press the "+" button.	ROM Check: N/A
PX3/PX3B	Initialization: Battery Removal	Preload: PX3: Rhythm/Aux and "+" button while powering on. Then press the Bypass/Tune button. PX3B: HBB and "+"	ROM Check: N/A
PX4/PX4B	Initialization: Battery Removal	Preload: PX4: Rhythm and UP arrow buttons while powering on. Then press Enter/Rec. PX4B: Rhythm and Up arrow	ROM Check: N/A
S3	Initialization: Hold Stop and S1 while turning it on.	Preload: Hold Stop and S1 while turning it on.	ROM Check: Hold Stop and S4 while turning it on.
SG Rack	Initialization: Edit and Yes while turning it on.	Preload: Global screen 7, then select "O.K".	ROM Check: Hold Edit and FX On/Off while turning it on.
SGPROX	Initialization: Hold Program and Piano 8 while turning it on.	Preload: Program Edit mode screen 14 (Each program!)	ROM Check: Hold Program and Piano 7 while turning it on.
SP500	Initialization: Hold Function and Mixer while turning it on.	Preload: Function screen 7.	ROM Check: Hold Function and Mixer while turning it on.
T Series	Initialization: Hold Fine and Prog A while turning it on.	Preload: Disk Load (TSD00PII)	ROM Check: Hold Fine and Program A while turning it on (Will initialize... back up!)
Trinity Series	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (TFD00P and TFD01P)	ROM Check: Given on power up.
Triton Classic/ST	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (TNFD00P and TNFD01P for Classic, Hard Drive contains preload for Studio)	ROM Check: Given on power up.
Triton LE	Initialization: Hold Enter and 0 while turning it on	Preload: Global mode, F8, Select "Preload"	ROM Check: Given on power up.
Triton Rack	Initialization: Hold Enter and 0 while turning it on	Preload: Disk Load (TNRFD00P and TNRFD01P)	ROM Check: Given on power up.
TRR	Initialization: Hold A4 and Edit while turning it on.	Preload: Global screen 10, then select "OK".	ROM Check: Hold Enter and Yes while turning it on.

WS/WSEX/AD	Initialization: Power on, wait for "Wavestation" to flash then Cursor down and 4. Enter Init screen from there.	Preload: Card Load (WPC00PI, II and III)	ROM Check: Power on, wait for "Wavestation" to flash then Cursor down and 4.
WSSR	Initialization: Hold Down Cursor, Bank, Edit and Yes while on. Enter Init screen from there.	Preload: Card Load (WPC00PI, II and III)	ROM Check: Hold Down Cursor, Bank Edit and Yes while on.
X2/X3/X3R	Initialization: Hold Page Down and 0 while turning it on	Preload: Disk Load (XSD00P)	ROM Check: Hold Enter and 7 while turning it on.
X5/X5D/DR	Initialization: Hold Page + and Page - while turning it on.	Preload: Global Screen 5A, then select "OK".	ROM Check: Hold Edit and Global/Multi while turning it on.
Z1/Z1EX	Initialization: Hold down SW1 and SW2 while turning it on.	Preload: Preload screen in global mode.	ROM Check: Hold Exit and Enter while turning it on.





